





# 3D

WAVE - FOREST - PRISM - CUBISM - TETRIS - TECHNICS

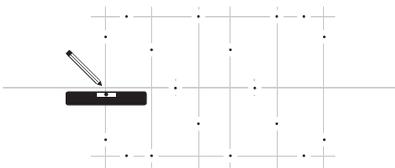


## STEP 1

Plot your Soundtect installation on the wall. Work out your bracket spacing based on the number of panels in your design.

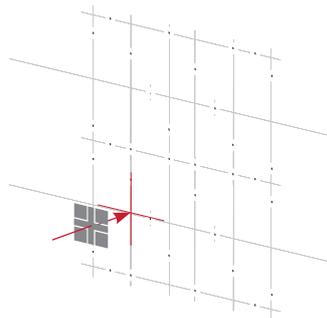


## STEP 2

Find the centre of central BRACKET B and fix into place.

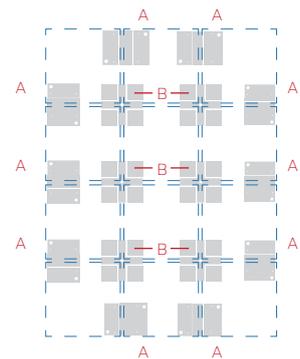


## STEP 3

Continue to fit remaining brackets.

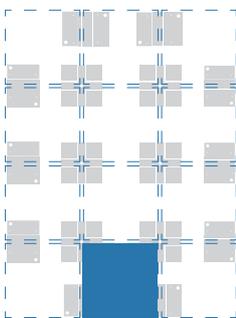


## STEP 4

Simply slide the panel onto the brackets

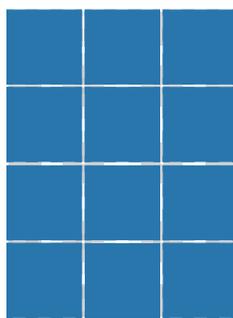

## STEP 5


Continue with all the other panels to complete the installation.

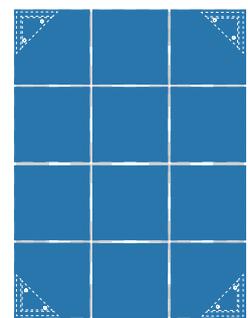

## STEP 6

Once all the panels are in place. You have the option of adding in the corner brackets to hold the outer four corners in place.

**When installing the corner brackets ensure they are on the inside of the panels.**

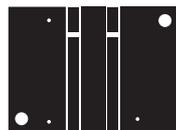

BRACKET A



BRACKET B



BRACKET C